

 


## ENGLISH

Thank you for purchasing the portable digital audio player HiBy R1. To help you get the best out of the R1, this user guide has been compiled to introduce you to the R1's features and how to use them. Please read thoroughly in the first days of ownership.

The HiBy R1 is a high performance, high fidelity digital audio player that supports DSD, DXD, WAV, FLAC, MQA, ALAC, APE, WMA lossless/lossy, AIFF, AAC, MP3, Ogg Vorbis and other lossless/lossy music formats.

## BUTTONS AND PORTS


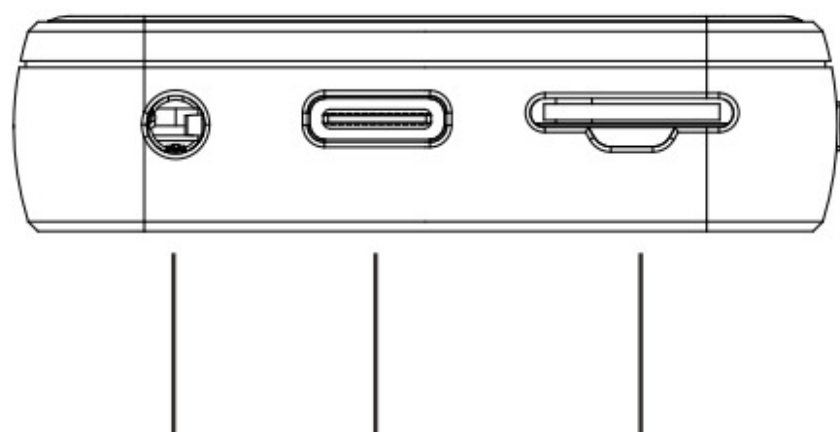


1

2

3

  4

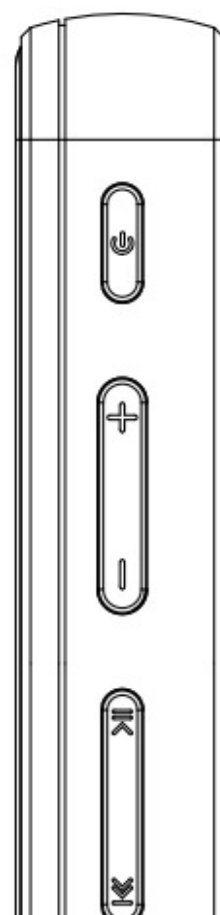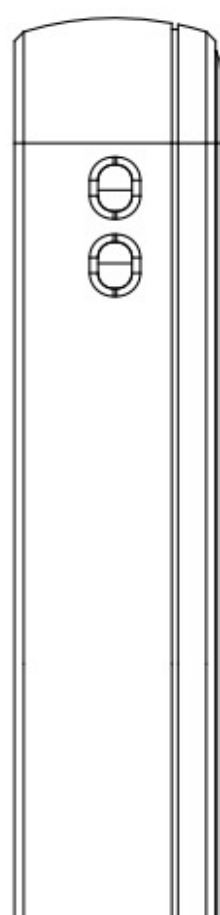


5

6

7

8

 9

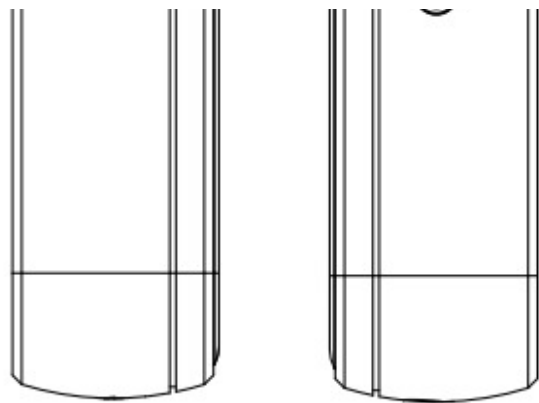

- ① 3.5mm earphone jack that supports CTIA standard line control, but not MIC.
- ② Type-c interface that supports USB DAC OUT. A dedicated cable is required, which can be purchased from the official stores on Amazon, Aliexpress or [store.hiby.com](http://store.hiby.com).
- ③ MicroSD card slot that supports up to 2TB.
- ④ Hanging rope hole.
- ⑤ Power button that clicks to turn on/off the screen and long-presses to turn on/off the device.

- ⑥ Volume+.
- ⑦ Volume-.
- ⑧ Play/Pause.
- ⑨ Next song.

## **HiBy Music App**

R1 works better together with the HiBy Music Android / iOS app. It supports WiFi music transfer and transmits songs on mobile phones, computers and tablets to the R1 via a shared WiFi. HiByLink remote control function connects to and controls the R1 via mobile phone Bluetooth. Change tracks, select songs, manage songs remotely. Scan the QR code here to download the HiBy Music app.







## **File transfer**

Connect the bundled USB cable between the R1 and the computer, then choose the File Transfer USB mode on the R1.

## **Wireless connections**

1.Supports Bluetooth 5.1;  
2.2.4GHz WiFi supported for streaming music, internet usage etc., and also music transfer, HiByLink remote control, and DLNA / LAN music connection using the HiByMusic app.

## **Firmware upgrade**

1.Connect to WiFi for updates;  
2.System will detect and prompt availability of new versions automatically under notification shade;  
3.Manual check for updates also available

under system settings.

## **Other functions**

Hold the power button for over 10 seconds to reset / reboot the player.

## **International official website**

<http://store.hiby.com>

## **Global after-sales service**

Please contact us at [service@hiby.com](mailto:service@hiby.com) or directly contact the store you purchased from.



## Cautions

1. Do not repair, disassemble, or place the product in a place with water.
2. When the product is not used for a long time, it is necessary to periodically charge the product to ensure battery life.
3. When you use the headphones, you will not be able to hear the external environment. For your safety, please avoid using the headphones in a dangerous environment.
4. Charging with a charger with too high voltage may damage the device. Please choose a recommended charger to charge.

## **DONGGUAN SMARTACTION TECHNOLOGY CO.,LTD.**

TEL: 0086-769-23182216 Website: [www.hiby.com](http://www.hiby.com)

Email: [service@hiby.com](mailto:service@hiby.com)

Address: Room 1201, Lianjing Commercial Building, No.39,  
Hongwei 3rd Road,Nancheng District, Dongguan,  
Guangdong, China



